JAN 2 8 2003
SEPP11.001AU

PATENT

IN THE UNITED STATES PATENT AND TRADEMARK OFFICE

Applicant	:	Sven Lindfors)	Group Art Unit:	1765			
Appl. No.	:	09/836,674)					
Filed	:	April 16, 2001)					
For	:	METHOD AND APPARATUS OF GROWING A THIN FILM ONTO A SUBSTRATE))))					
Examiner	:	Song, Matthew J	<u> </u>	•	-50			
		DECLARATION UNDER 37 C.F	<u>.R.</u>	<u>§1.131</u>	1700	- 近半3	RECE	
ASSISTANT C WASHINGTON		SSIONER FOR PATENTS 20231			MAILE	 	ECEIVED	
SIR:					Rour) }		

- 1. The following declaration is directed to establishing invention of the subject matter of Claims 1-26 of the above-referenced application prior to the effective date of U.S. Patent No. 6,305,314.
- 2. I am the inventor of the subject matter claimed in the above-referenced application.
- 3. I have read the Office Action mailed on July 25, 2002 in which the Examiner rejected Claims 1-20 and 22-25 under 35 U.S.C. 102(e) as being anticipated by U.S. Patent No. 6,305,314 and Claims 14-15, 19, 21, and 16 under 35 U.S.C. 103(a) as being obvious over U.S. Patent No. 6,305,314 in combination with various other references.
- 4. Before December 17, 1999 (the effective filing date of U.S. Patent No. 6,305,314), I reduced to practice a method for growing a thin film on a surface of a substrate in a reaction chamber according to the ALD method, the method comprising feeding a pulse of a first vapor phase reactant into the reaction chamber; reacting the first vapor phase reactant with the surface

Appl. No. Filed

Δ

9/836,674 April 16, 2001

of said substrate to form a thin film on said substrate, wherein residual first vapor phase reactant remains in the reaction chamber; and feeding a pulse of a second vapor phase reactant into the reaction chamber, wherein the second vapor phase reactant reacts with the residual first vapor phase reactant to form a solid reaction product in said reaction chamber.

Before December 17, 1999 (the effective filing date of U.S. Patent No. 6,305,314), I also reduced to practice an apparatus for growing thin films on a substrate by subjecting the substrate to alternately repeated surface reactions of vapor phase reactants according to the ALD method. The apparatus comprising a pre-reactor; a reaction chamber into which the substrate can be disposed, wherein the pre-reactor is arranged immediately upstream of said reaction chamber; a plurality of inflow channels communicating with the reaction chamber, wherein the inflow channels are adapted to feeding the vapor phase reactants in the form of vapor-phase pulses into said reaction chamber; and at least one outflow channel communicating with the reaction chamber, the outflow channel being adapted for the outflow of reaction products and excess amounts of the vapor phase reactants from said reaction chamber, wherein the pre-reactor forms a first reaction zone, in which the reactants of successive vapor-phase pulses can be reacted with each other in the vapor phase to form a solid reaction product, wherein the reaction chamber forms a second reaction zone that can be operated under conditions conducive to ALD growth of a thin film.

The reduction to practice is evidenced by the attached drawing of a pilot reactor and the attached test data taken from the pilot reactor. The pilot reactor illustrated in the attached drawing and the test data were created in Keilaramta, Espoo Finland before December 17, 1999. The exact dates have been reducted from the attached documents.

5. I further declare that all statements made herein of my own knowledge are true and that all statements made on information and belief are believed to be true; and further that these statements were made with the knowledge that willful, false statements and the like so made are punishable by a fine or imprisonment, or both, under Section 1001 of Title 18 of the United States Code and that such willful false statements may jeopardize the validity of the application or any patent issuing thereon.

22/01 '03 KE 10:55 FAX 358 9 68595610 SEPPO LAINE OY

Det-18-2002 03:02ps From-KNOBBE MARTERS OLSON BEAR 848 7609502 T-847 P.008/U14 T-888

Appl. No. : 09/836,674 Filed : April 16, 2001

S. L. afors


Sven Lindfors

Date 0 Date 0

2004

H::DOCS/RNN/RNN-5613,DOC

-3-

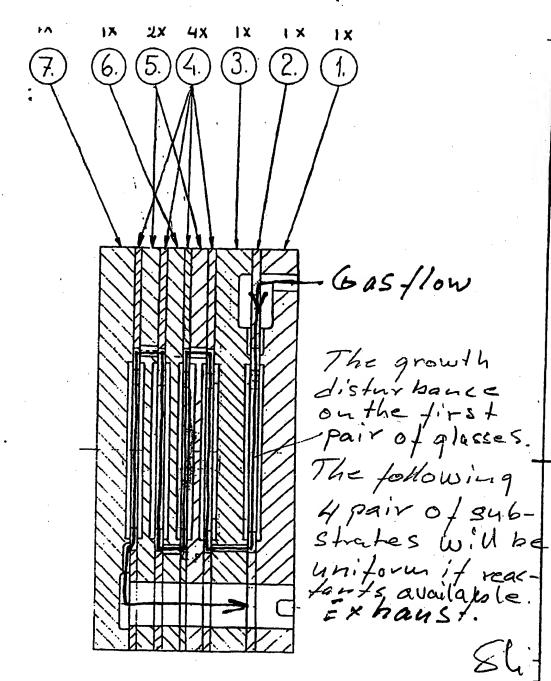

See enclosed run 2731

Osa	Piitustusnumero Tavaratunnus	Osan tai kokoonpanoryhmän Standardi nimitys tai luettelo			Muoto, ma	li, määrä Lajimerkki	Laatu	Крі
	S 4011	Mitiakaava	Tuote	Liitiyy		Male	Dua Z	<u>-</u>
Veski		1 1			Assy		1. Drawing	
Piirl Suuni	28.0590 / Kal	110	Pilot p	lant		Ent.	Uusi	
Tark. 59 00 10 51 Massa		Reactor 1			25.00.030.40			
		massa	BEF ME			10-	-21, 1	

ASM MICROCHEMISTRY OY

Raterial: TiO2 Operator: SLi Run: 2731


Comments: IB-pohjat
TiCl4 6 kierr. auki t=25°C
H20 6 kierr. auki t=25°C
A) pilot pakka 6 substr.


Substr. temp./ C' Source temperatures / C' Vapor source/SCCM
Sone

8 7 6 5 4 3 2 1 1 8 8 C

Sone Heater Inside	Subst 8 0 0	r. te 7 476 0	mp./ C' 6 476 0	5 476 400	Source 0 0	e temp	1 4	res / 1 0 0	c'	Vapor À	sourc B	e/SCCH C
Seq 3 Se	eq 2 8	eq 1	Mater Valve					Ti 7	N2 3	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	H20 8	N2 6

1 2 3 4 5 6 7 8 COOL SLOW HEAT.
##EATER 37 52 61 83 128 201 130 73 FLOW PRI 0.30 SLM
##INSIDE 42 47 65 270 FLOW SEC 0.10 SLM
##PRESSURE 3.9 MBAR
##INSIDE FLOW SRC 8.84 SCCM

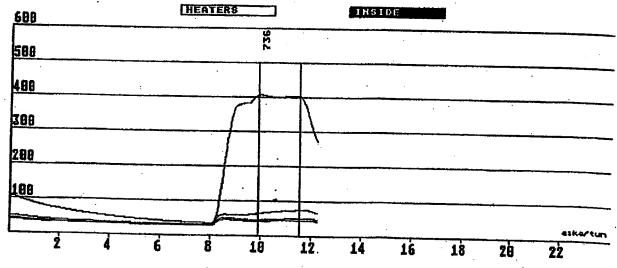

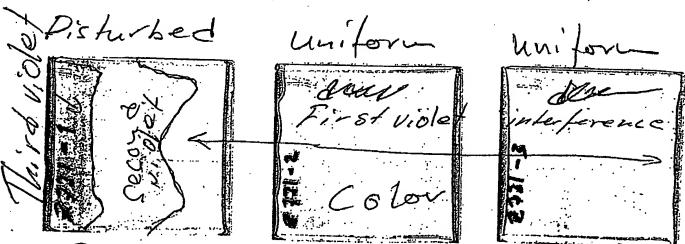

.

Dear Raj:

I spooked with Vesa this morning about the uniformity problem. I send you with this fax some information regarding the useful uniform area on the substrate. Chris Langdon was informed in the specifications of F-120 that the uniform area begins 20 mm after the front edge of the substrate.

I'm sure dr. Suntola will take up this matter with you and then we can decide what to do.

First, the TiO2 reference runs, where you can see the difference of introducing the reactants either from opposite sides or from the same side. Run 759 is completely uniform and run 748 has a non uniform area in the front side of the glas.

The non uniform edge of the glas 748 is not "abnormal". The reactor is designed like this to prevent the growth on the quarts parts and by that reducing the need of cleaning the parts. When the materials are feed from opposite sides, the purge of the gas channels and the spreading chamber, in-between the material pulses, will take most of the excess material away, but there will always remain a tail that gives some vapor pressure. So, we end up with a CVD situation where the remainder from the first reactant will react with the following reactant in a conventional CVD mode, where both of the reactants are available in the gas phase simultaneously.

The second drawing shows a "pilot reactor head" where its possible to run up to ten (10) substrates in the same run. I tried to copy the appearance of the samples to show you how the first pair of glasses will take the disturbed growth and the following glasses are uniform from the very front edge as long as there is reactants available.

Best regards


Sven Lindfors

TiOn reference run.

2 7 5 9

Materials from

Materials from opposite

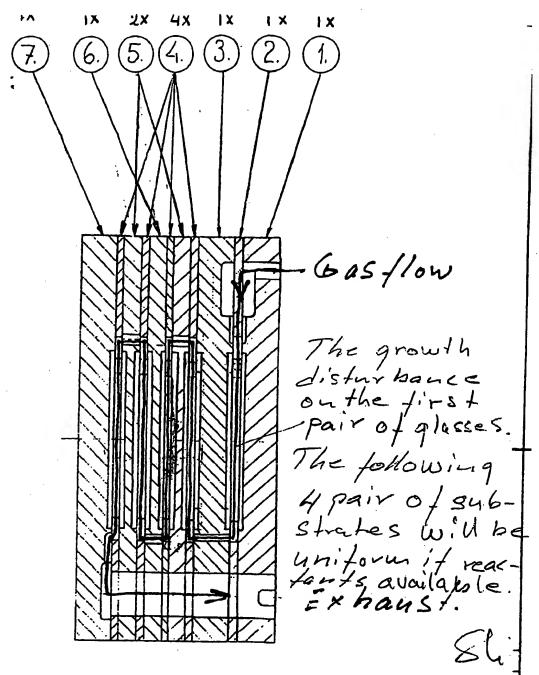

See enclosed run 2731

Osa Piirustusnumero Tavaratunnus	Osan lai koko nimitys	onpanoryhmän	Standardi tai luettelo	Muoto, malli, määrä Lajimerkki	l Laatu	Крі
Yleistoleranssil SFS 4011 Vesski	Mittakaava 1 1	Tuote	Liitiyy	Male	Qualz Drawing	
Piirt. 28.0530 / k Suunn. 57 Tark. 59 05 16 5 Hyv.	A CO W	Pilos Rea	t plant	,	030.40 584 4)	

M MICROCHEMISTRY OY

pilot pack 6 substrates

Material: TiO2 Operator: SLi Run: 8731 Comments: IB-pohjat P0:5.0 mb TiCl4 6 kierr. auki t=25'C F1:0.3 slm H2O 6 kierr. auki t=25°C F2:0.1 slm pilot pakka 6 substr. Source temperatures / C' Vapor source/SCCH Zone 7 6 3 Heater | 0 476 476 476 0 Inside |0 0 0 400 0 0 Seq 3 Seq 2 Seq 1 Mater Ti H20 N2 Valve 3 8 6 3000 2/8 2/8 2/8 2/8

12:16:34 8 73 COOL SLOW HEAT. 201 FLOM PRI 0.30 INSIDE FLOH SEC 8.10 HOH. PRESSURE 3.9 MBAR FLOW SRC 8.84 SCCM

